



BSW Socket Head Cap Screw - Alloy Steel

1/8 Bsw - 40 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
5/16	U01 03008??	100	
3/8	U01 03010??	100	
1/2	U01 03012??	100	
5/8	U01 03016??	100	
3/4	U01 03020??	100	
1"	U01 03025??	100	
1-1/4"	U01 03032??	100	

Wrench size 3/32

Replace ?? With PL = Plain or ZP = Zinc



3/16 Bsw - 24 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1/4	U01 05006??	100	100
3/8	U01 05010??	100	100
1/2	U01 05012??	100	100
5/8	U01 05016??	100	100
3/4	U01 05020??	100	100
7/8	U01 05022??	100	100
1"	U01 05025??	100	100
1-1/4"	U01 05032??	100	100
1-1/2"	U01 05038??	100	100
1-3/4"	U01 05045??	100	100
2"	U01 05050??	100	100
2-1/4"	U01 05057??	100	100
2-1/2"	U01 05063??	100	100
3"	U01 05075??	100	100
3-1/2"	U01 05088??	100	100
4"	U01 05100??	100	100

Wrench size 5/32

Replace ?? With PL = Plain or ZP = Zinc

1/4 Bsw - 20 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/8	U01 06010??	100	100
1/2	U01 06012??	100	100
5/8	U01 06016??	100	100
3/4	U01 06020??	100	100
7/8	U01 06022??	100	100
1"	U01 06025??	100	100

Wrench size 3/16

Replace ?? With PL = Plain or ZP = Zinc

Continued next page



BSW Socket Head Cap Screw - Alloy Steel

Continued from previous page

1/4 Bsw - 20 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1-1/4"	U01 06032??	100	100
1-1/2"	U01 06038??	100	100
1-3/4"	U01 06045??	100	100
2"	U01 06050??	100	100
2-1/4"	U01 06057??	100	100
2-1/2"	U01 06063??	100	100
2-3/4"	U01 06069??	100	100
3"	U01 06075??	100	100
3-1/4"	U01 06082??	100	100
3-1/2"	U01 06088??	100	100
4"	U01 06100??	100	100
4-1/2"	U01 06112??	50	50
5"	U01 06125??	50	50



Wrench size 3/16

Replace ?? With PL = Plain or ZP = Zinc

5/16 Bsw - 18 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/8	U01 08010??	100	100
1/2	U01 08012??	100	100
5/8	U01 08016??	100	100
3/4	U01 08020??	100	100
7/8	U01 08022??	100	100
1"	U01 08025??	100	100
1-1/4"	U01 08032??	100	100
1-1/2"	U01 08038??	100	100
1-3/4"	U01 08045??	100	100
2"	U01 08050??	100	100
2-1/4"	U01 08057??	100	100
2-1/2"	U01 08063??	100	100
2-3/4"	U01 08069??	100	100
3"	U01 08075??	100	100
3-1/4"	U01 08082??	100	100
3-1/2"	U01 08088??	100	100
4"	U01 08100??	100	100
4-1/2"	U01 08112??	100	100
5"	U01 08125??	100	100
6"	U01 08150??	100	100
7"	U01 08175??	100	100

Wrench size 7/32

 
Replace ?? With PL = Plain or ZP = Zinc



BSW Socket Head Cap Screw - Alloy Steel

3/8 Bsw - 16 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1/2	U01 10012??	100	100
5/8	U01 10016??	100	100
3/4	U01 10020??	100	100
7/8	U01 10022??	100	100
1"	U01 10025??	100	100
1-1/4"	U01 10032??	100	100
1-1/2"	U01 10038??	100	100
1-3/4"	U01 10045??	100	100
2"	U01 10050??	100	100
2-1/4"	U01 10057??	100	100
2-1/2"	U01 10063??	50	50
2-3/4"	U01 10069??	50	50
3"	U01 10075??	50	50
3-1/4"	U01 10082??	50	50
3-1/2"	U01 10088??	50	50
4"	U01 10100??	50	50
4-1/2"	U01 10112??	50	50
5"	U01 10125??	50	50
5-1/2"	U01 10138??	50	50
6"	U01 10150??	50	50
7"	U01 10175??	50	50
8"	U01 10200??	50	50
9"	U01 10225??	1	1
10"	U01 10250??	1	1
Wrench size 5/16		Replace ?? With PL = Plain or ZP = Zinc	



7/16 Bsw - 14 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/4	U01 11020??	100	100
1"	U01 11025??	100	100
1-1/4"	U01 11032??	100	100
1-1/2"	U01 11038??	100	100
1-3/4"	U01 11045??	100	100
2"	U01 11050??	50	50
2-1/4"	U01 11057??	50	50
2-1/2"	U01 11063??	50	50
3"	U01 11075??	50	50
3-1/2"	U01 11088??	50	50
4"	U01 11100??	50	50
Wrench size 5/16		Replace ?? With PL = Plain or ZP = Zinc	



BSW Socket Head Cap Screw - Alloy Steel

1/2 Bsw - 12 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
5/8	U01 12016??	50	50
3/4	U01 12020??	50	50
7/8	U01 12022??	50	50
1"	U01 12025??	50	50
1-1/4"	U01 12032??	50	50
1-1/2"	U01 12038??	50	50
1-3/4"	U01 12045??	50	50
2"	U01 12050??	50	50
2-1/4"	U01 12057??	50	50
2-1/2"	U01 12063??	50	50
2-3/4"	U01 12069??	50	50
3"	U01 12075??	50	50
3-1/4"	U01 12082??	25	25
3-1/2"	U01 12088??	25	25
4"	U01 12100??	25	25
4-1/2"	U01 12112??	25	25
5"	U01 12125??	25	25
5-1/2"	U01 12138??	25	25
6"	U01 12150??	25	25
6-1/2"	U01 12163??	10	10
7"	U01 12175??	10	10
7-1/2"	U01 12175??	10	10
8"	U01 12200??	10	10
9"	U01 12225??	10	10
10"	U01 12250??	10	10
11"	U01 12275??	10	10
12"	U01 12300??	10	10



Wrench size 3/8

Replace ?? With PL = Plain or ZP = Zinc

5/8 Bsw - 11 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1"	U01 16025??	25	50
1-1/4"	U01 16032??	25	50
1-1/2"	U01 16038??	25	50
1-3/4"	U01 16045??	25	50
2"	U01 16050??	25	50
2-1/4"	U01 16057??	25	25
2-1/2"	U01 16063??	25	25

Wrench size 1/2

Replace ?? With PL = Plain or ZP = Zinc

Continued next page



BSW Socket Head Cap Screw - Alloy Steel

Continued from previous page

5/8 Bsw - 11 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
2-3/4"	U01 16069??	25	25
3"	U01 16075??	25	25
3-1/4"	U01 16082??	25	25
3-1/2"	U01 16088??	25	25
4"	U01 16100??	25	25
4-1/2"	U01 16112??	25	25
5"	U01 16125??	25	25
5-1/2"	U01 16138??	10	10
6"	U01 16150??	10	10
6-1/2"	U01 16163??	10	10
7"	U01 16175??	10	10
8"	U01 16200??	10	10
9"	U01 16225??	10	10
10"	U01 16250??	10	10
11"	U01 16275??	10	10
12"	U01 16300??	10	10
Wrench size 1/2		Replace ?? With PL = Plain or ZP = Zinc	



3/4 Bsw - 10 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
1-1/4"	U01 20032??	25	25
1-1/2"	U01 20038??	25	25
1-3/4"	U01 20045??	25	25
2"	U01 20050??	25	25
2-1/4"	U01 20057??	25	25
2-1/2"	U01 20063??	25	25
2-3/4"	U01 20069??	25	25
3"	U01 20075??	25	25
3-1/4"	U01 20082??	25	25
3-1/2"	U01 20088??	25	25
4"	U01 20100??	25	25
4-1/2"	U01 20112??	25	25
5"	U01 20125??	25	25
5-1/2"	U01 20138??	10	10
6"	U01 20150??	10	10
6-1/2"	U01 20163??	10	10
7"	U01 20175??	10	10
Wrench size 9/16		Replace ?? With PL = Plain or ZP = Zinc	

Continued next page



BSW Socket Head Cap Screw - Alloy Steel

Continued from previous page

3/4 Bsw - 10 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
8"	U01 20200??	10	10
9"	U01 20225??	10	10
10"	U01 20250??	10	10
11"	U01 20275??	10	
12"	U01 20300??	10	



Wrench size 9/16

Replace ?? With PL = Plain or ZP = Zinc

7/8 Bsw - 9 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1-1/2"	U01 22038??	10	10
1-3/4"	U01 22045??	10	10
2"	U01 22050??	10	10
2-1/4"	U01 22057??	10	10
2-1/2"	U01 22063??	10	10
2-3/4"	U01 22069??	10	10
3"	U01 22075??	10	10
3-1/4"	U01 22082??	10	10
3-1/2"	U01 22088??	10	10
4"	U01 22100??	10	10
4-1/2"	U01 22112??	10	10
5"	U01 22125??	10	10
6"	U01 22150??	10	10
7"	U01 22175??	10	10

Wrench size 9/16

Replace ?? With PL = Plain or ZP = Zinc

1" Bsw - 8 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1-1/2"	U01 25038??	10	10
1-3/4"	U01 25045??	10	10
2"	U01 25050??	10	10
2-1/4"	U01 25057??	10	10
2-1/2"	U01 25063??	10	10
2-3/4"	U01 25069??	10	10
3"	U01 25075??	10	10
3-1/2"	U01 25088??	10	10
4"	U01 25100??	10	10

Wrench size 5/8

Replace ?? With PL = Plain or ZP = Zinc

Continued next page



BSW Socket Head Cap Screw - Alloy Steel

Continued from previous page

1" Bsw - 8 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
4-1/2"	U01 25112??	10	10
5"	U01 25125??	10	10
6"	U01 25150??	10	10
7"	U01 25175??	10	10
8"	U01 25200??	10	10
9"	U01 25225??	10	10
Wrench size 5/8		Replace ?? With PL = Plain or ZP = Zinc	



1-1/4" Bsw - 7 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
2-1/2"	U01 32063??	1	
3"	U01 32075??	1	
3-1/2"	U01 32088??	1	
4"	U01 32100??	1	
4-1/2"	U01 32112??	1	
5"	U01 32125??	1	
5-1/2"	U01 32138??	1	
6"	U01 32150??	1	
6-1/2"	U01 32163??	1	
7"	U02 32175??	1	
8"	U02 32200??	1	
9"	U02 32225??	1	
10"	U02 32250??	1	
12"	U02 32300??	1	
Wrench size 3/4		Replace ?? With PL = Plain or ZP = Zinc	

1-1/2" Bsw - 6 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
3"	U01 38075??	1	
3-1/2"	U01 38088??	1	
4"	U01 38100??	1	
4-1/2"	U01 38112??	1	
5"	U01 38125??	1	
5-1/2"	U01 38138??	1	
6"	U01 38150??	1	
7"	U01 38175??	1	
Wrench size 1"		Replace ?? With PL = Plain or ZP = Zinc	

Continued next page



BSW Socket Head Cap Screw - Alloy Steel

Continued from previous page

1-1/2" Bsw - 6 tpi

Length	Code	Plain	Zinc
		Pack Quantity (if available)	
8"	U01 38200??	1	
9"	U01 38225??	1	
10"	U01 38250??	1	
12"	U01 38300??	1	
Wrench size 1"		Replace ?? With PL = Plain or ZP = Zinc	

