



Low Head Socket Head Cap Screw - Imperial - Alloy Steel

#10 Unc - 24 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/8	U45 05010UNC??	100	
1/2	U45 05012UNC??	100	
5/8	U45 05016UNC??	100	
3/4	U45 05020UNC??	100	
1"	U45 05025UNC??	100	
Wrench size 3/32		Replace ?? With PL = Plain or ZP = Zinc	



#10 Unf - 32 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1/4	U45 05006UNF??	100	
3/8	U45 05010UNF??	100	
1/2	U45 05012UNF??	100	
5/8	U45 05016UNF??	100	
3/4	U45 05020UNF??	100	
1"	U45 05025UNF??	100	
Wrench size 3/32		Replace ?? With PL = Plain or ZP = Zinc	

1/4 Unc - 20 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/8	U45 06010UNC??	100	
1/2	U45 06012UNC??	100	
5/8	U45 06016UNC??	100	
3/4	U45 06020UNC??	100	
1"	U45 06025UNC??	100	
1-1/4"	U45 06032UNC??	100	
1-1/2"	U45 06038UNC??	100	
Wrench size 1/8		Replace ?? With PL = Plain or ZP = Zinc	

5/16 Unc - 18 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1/2	U45 08012UNC??	100	
5/8	U45 08016UNC??	100	
3/4	U45 08020UNC??	100	
1"	U45 08025UNC??	100	
1-1/4"	U45 08032UNC??	100	
1-1/2"	U45 08038UNC??	100	
1-3/4"	U45 08045UNC??	100	
Wrench size 5/32		Replace ?? With PL = Plain or ZP = Zinc	



Low Head Socket Head Cap Screw - Imperial - Alloy Steel

3/8 Unc - 16 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
1/2	U45 10012UNC??	100	
5/8	U45 10016UNC??	100	
3/4	U45 10020UNC??	100	
1"	U45 10025UNC??	100	
1-1/4"	U45 10032UNC??	100	
1-1/2"	U45 10038UNC??	100	
Wrench size 3/16		Replace ?? With PL = Plain or ZP = Zinc	



1/2 Unc - 13 tpi

Length	Code	Plain	Zinc
Pack Quantity (if available)			
3/4	U02 12020??	100	
1"	U02 12025??	50	
1-1/4"	U02 12032??	50	
1-1/2"	U02 12038??	50	
Wrench size 1/4		Replace ?? With PL = Plain or ZP = Zinc	